## TYPE W11 DC MOLDED SOLENOID COIL **& ENCLOSURE INFORMATION**

## **INSTALLATION – Refer to drawing on reverse side**

PLAST-O-MATIC solenoid coils are molded with corrosion resistant polyester and are designed to meet NEMA 4 standards. These coils are water and dust tight and are supplied standard with a 1/2" NPT female nylon connector assembly. A connector assembly with an optional indicator light and other choices can be found in the PLAST-O-MATIC catalog. The coil is intended for indoor or outdoor use in general purpose applications as well as those where conditions such as dust, blowing dirt or splashing water are likely to be found. They should never be submerged in water.

These coils are equipped with a DIN standard connector assembly (DIN 43650 and ISO 4400). The standard external connection is 1/2" NPT. This type of connector allows internal electrical connections to be made easily while disconnected from the coil. The external cable connection to the housing may be arranged at any one of 4 angles (90° increments) to facilitate valve installation.

The coil can be rotated to any position in relation to the valve by loosening the cap nut on top of the coil. Rotate the coil to the desired position. Retighten the cap nut snugly to be sure the O-rings and gasket seal properly. Hand tight is sufficient.

WIRING INSTALLATION: Three wires (one is ground) are recommended. To connect the wires loosen screw and pull connector assembly away from coil. Use a small screwdriver and carefully pry the inside connector from housing using the visible slot at the corner of the connector. Screw your conduit or cable fitting into the housing. Pass the wires through your fitting and the housing and then connect them to the terminals on the connector. One terminal is marked with the ground symbol (\_\_\_\_) and the other two are hot leads. Coil is not polarity sensitive. Reassemble, paying attention to the desired orientation of the conduit connection. Tighten the conduit fitting to secure the conduit. Make sure the two gaskets are properly seated before tightening the connector assembly to the coil. Do not overtighten. For three-phase power systems the terminals can be connected to any two of the three phases. All local wiring codes should be followed when wiring the coil.

**IMPORTANT MOUNTING INFORMATION:** Solenoid valves with 17 watt molded coils will operate in any position. however, it is recommended that they be mounted in an up-right position for maximum cycle life.

## OPERATION

PLAST-O-MATIC molded solenoid coils are rated for continuous duty up to 104°F (40°C) ambient. Above this temperature they are rated intermittent duty requiring a cool down period before re-energizing. A general rule-ofthumb for ambient temperatures between 104°F (40°C) and 122°F (50°C) is to allow an equal amount of cool-down time as compared to energized time with a maximum time of 1/2 hour. At higher temperatures more cool-down time is needed.

Coils can be operated up to 15% below their listed nominal voltages, however, the inlet pressure rating of the valve will be about 30% lower. Also, coils exposed to voltages in excess of their rated nominal voltage will operate hotter than intended which could lead to coil and valve failure. Consult factory for specific information.

PLAST-O-MATIC solenoid valves will operate properly and offer trouble-free service when the valves' pressure ratings are adhered to. Pressure ratings can be found both in the PLAST-O-MATIC solenoid valve catalog (EAST) and on the valves' body labels.

STYLE		<ul> <li>CORROSION RESISTANT</li> <li>CONTINUOUS DUTY</li> <li>SAFE OPERATING TEMP.</li> <li>NEMA 4 WATER AND DUST TIGHT ENCLOSURE</li> <li>MOISTURE PROOF</li> </ul>	INSTALLATION CLASS	F
<b>W11</b>   17 WATT			COIL SURFACE TEMPERATURE	185°F 85°C
CLASS "F" COILS			MAX. ALLOWABLE AMBIENT TEMP. *	104°F 40°C
Continuous Duty		• FUNGUS PROOF	WATTS	17
			* WITH POWER ON CONTINU	JOUSLY


## **CURRENT CONSUMPTION**

The current may determined from the watts rating in the above table. To determine the current, divide the voltage into the watts rating.



Current (Amps) =  $\frac{Watts}{Voltage}$ 

PLAST-@-MATIC 1384 Pompton Avenue, Cedar Grove, New Jersey 07009 (973) 256-3000 • Fax: (973) 256-4745 • www.plastomatic.com

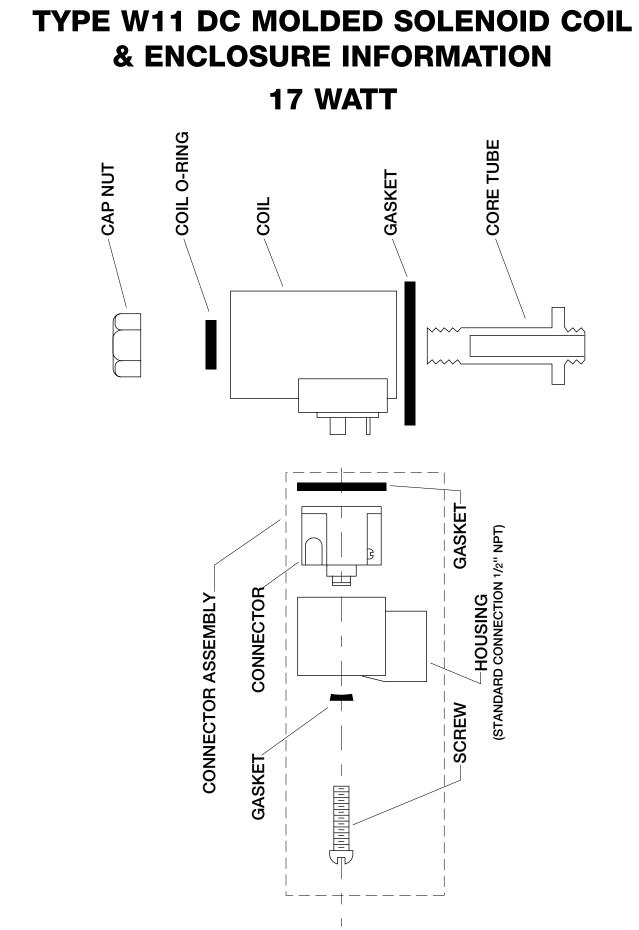

rype w11 dc molded solenoid coil & enclosure information

PLAST-@-MA

VES,

INC.

VAL

 1384 Pompton Avenue, Cedar Grove, New Jersey 07009 (973) 256-3000 • Fax: (973) 256-4745 • www.plastomatic.com