Plast-O-Matic Pressure Regulators 1/2" - 3" CRITICAL MAINTENANCE ADDENDUM

MANDATORY PRE-INSTALLATION SERVICE

All Plast-O-Matic pressure regulators must have the external connection screws or nuts retorqued to the required torque setting before putting unit into operation.



- 1. Remove blue plastic screw cover caps if unit is equipped (do not discard).
- 2. Retorque screws or nuts (depending on the particular unit) to the torque setting outlined below. Retorque all external connection screws and nuts in opposing pairs.
- 3. Replace the blue screw cover caps on applicable units.

TORQUE VALUES:

REGULATOR SIZE	MATERIAL	TORQUE	
1/2"	PVC, CPVC, PVDF	20 - 24 in·lbs	2.26 – 2.7 N·m
3/4" - 3"	PVC, CPVC, PVDF	40 - 45 in·lbs	4.52 – 5 N·m
1/2"	POLY PRO	9 – 11 in·lbs	1 – 1.24 N·m
3/4" – 3"	POLY PRO	25 – 28 in·lbs	2.8 – 3.16 N·m