PLAST-O-MATIC

METERING MANUAL BALL VALVE





FEATURES:

- For use with True Blue Ball Valves with or without ZC angle characterized balls, ½" 2 sizes.
- Available as complete valve assembly or as kit for field retrofit.
- Metering parts fabricated from corrosion-resistant thermoplastic.

| | BALL VALVE | Н | | H1 | |
|------------|-----------------------|-----|-------|-----|-------|
| KIT NUMBER | SIZE | IN. | MM. | IN. | MM. |
| MBVM-1.2 | 1/2" | 2.4 | 60.4 | 3.4 | 85.8 |
| MBVM-1.6 | ³ ⁄4" - 1" | 3.2 | 81.0 | 4.4 | 112.3 |
| MBVM-2.5 | 1¼" - 2" | 4.2 | 107.5 | 6.3 | 159.2 |


Part numbers shown are for field retrofit. For new valve, add -M suffix to full part number. Example: MBV100VT-PV-C4-M.

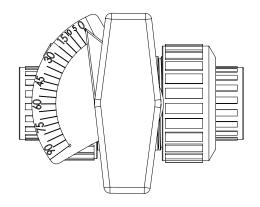

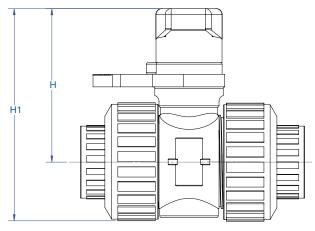

MBVM-1014-C-1

METERING MANUAL BALL VALVE

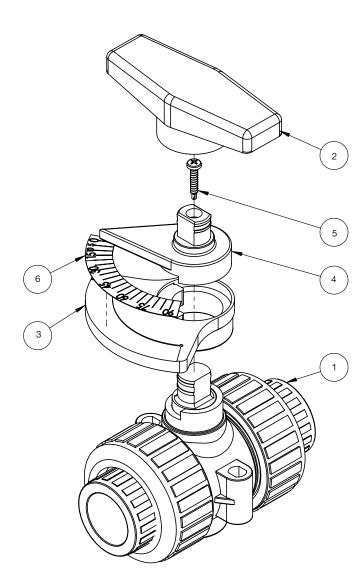

PLAST-O-MATIC

ASSEMBLY INSTRUCTIONS:

- If field retrofit, remove handle (item #2) from ball valve.
- First, with handle removed from valve, place the metering base (item #3) over the valve shaft and press down until it snaps onto ball valve shoulder.
- Second, align and press the metering pointer (item #4) onto the valve shaft. Screw the self-tapping fastener (item #5) through the hole on top of the metering pointer, firmly into the MBV shaft to secure the metering pointer.
- Finally, press the valve handle onto the metering pointer.
- The pointer will now indicate position of the ball. The valve begins to open at or near 15°, and is fully open at 90°. Adjust the handle to open/close the valve to increase/decrease the flow required.

| ITEM NO. | DESCRIPTION | QTY. |
|----------|--|------|
| 1 | BALL VALVE | 1 |
| 2 | MBV HANDLE | 1 |
| 3 | METERING BASE | 1 |
| 4 | METERING POINTER | 1 |
| 5 | DRILLING SCREW, PAN HEAD, #6-20 X 3/4" | 1 |
| 6 | METERING SCALE LABEL | 1 |

MBVM-1014-I-1